

Splendide/ Comb-O-Matic

Combination Washer/Dryers

This unit is a washer and a dryer

Operation: Use only 1 - 2 tablespoons of *HE* powder detergent, or liquid equivalent. Add detergent to dispenser "B" for washing, except when a cold/cold setting is selected. In this case add detergent to compartment "A."

If using the prewash cycle, detergent must be added to compartment "A." Set wash timer (far right) to desired cycle and switch unit on. The regular wash cycle is recommended for cottons, denim, and towels. This is the only cycle that will spin at 1000 rpm's - provided the high spin button is in the out position. If you elect to dry load immediately after the wash, set dry timer at this time. It is best if you take the clothes out and shake them before you set the dryer. They may stick to the tub and will dry that way. If you do not wish to dry the load, ensure the dry timer is at the "off" position. The door will unlock approximately 90 seconds after wash cycle completion. Do not force the door open.

If you elect to dry only - set the wash timer to the "off-dry" position following the cycle pertaining to the type of fabric, (e.g. regular, delicates, perma press, etc.) & set the dry timer to the desired time and turn unit on. The high heat button should be in the out position for all materials except silks and other fine fabrics. The dryer is very hot and you may wish to dry at a lower temperature for all clothing except perhaps towels and jeans.

Drying Time: Normal drying time is 60 to 90 minutes for cottons & polyesters. For instance, five normal bath towels should dry in approximately 75 minutes. Denim and other heavy materials, such as beach towels, may take up to 110 minutes. Dry times of greater than 120 minutes indicate a loss of efficiency. It is important for the clothes to tumble freely in the dryer to allow even heat distribution. Overloading will not allow proper tumbling and will hinder drying performance.

Note: Separate washers and dryers have different size drums. The wash drum is one-half the size of the dry drum, load your unit accordingly. This unit will not dry a full wash load efficiently.

Important Maintenance: The drain screen in the lower right corner must be cleaned periodically to prevent a build-up of lint or other foreign matter. With unit empty and off, turn wash selector to the final spin of the regular wash cycle. Turn unit on and wait for it to begin spinning. Remove the drain screen during this spin cycle, clean and replace before cycle stops. This will prevent residual water from running out of the unit and onto the floor. Turn unit off and reset for the next wash.

Please refer to owners manual for further details.